



QINGDAO XIANGJIE RUBBER MACHINERY CO., LTD

ADD: No. 168, Shanghai Road, Jiaonan, Qingdao, China

PH: +86-15192075706

Fax: +86-532-86191899

E-mail: xiangjie.qd@gmail.com

Web: www.qdxiangjie.com

**The production line of rubber tile: 350L mixer +
rubber tile machine + mold**

I. 350L mixer



Using mixer to mix rubber powder (particles) and glue

Mixing time: 5mins

One people operate



QINGDAO XIANGJIE RUBBER MACHINERY CO., LTD
ADD: No. 168, Shanghai Road, Jiaonan, Qingdao, China
PH: +86-15192075706 **Fax: +86-532-86191899**
E-mail: xiangjie.qd@gmail.com **Web: www.qdxiangjie.com**

II. 1100*1100*2/200T rubber tile machine



- 1.Fixed mould on machine. (We will fix the upper mould on upper hot plate when machine completed. So you just put lower mould on rail in you factory)
2. Putting mixture into rubber tile mould.
3. Setting vulcanizing time, exhaust time, temperature on electric box.
4. Pressing rise button. (the machine will automatic working)



QINGDAO XIANGJIE RUBBER MACHINERY CO., LTD

ADD: No. 168, Shanghai Road, Jiaonan, Qingdao, China

PH: +86-15192075706

Fax: +86-532-86191899

E-mail: xiangjie.qd@gmail.com

Web: www.qdxiangjie.com


Mould can automaticly sliding on hot plate----automatic rising----automatic exhaust----when finishing vulcanizing----automatic opening----mould will be automatic sliding out

5. Take out the rubber tile.

Take notice: When finishing machine, we can teach your stuff how to operate the machine for free, or we take the video to guide you how to operate it.

III Mould

500mm*500mm

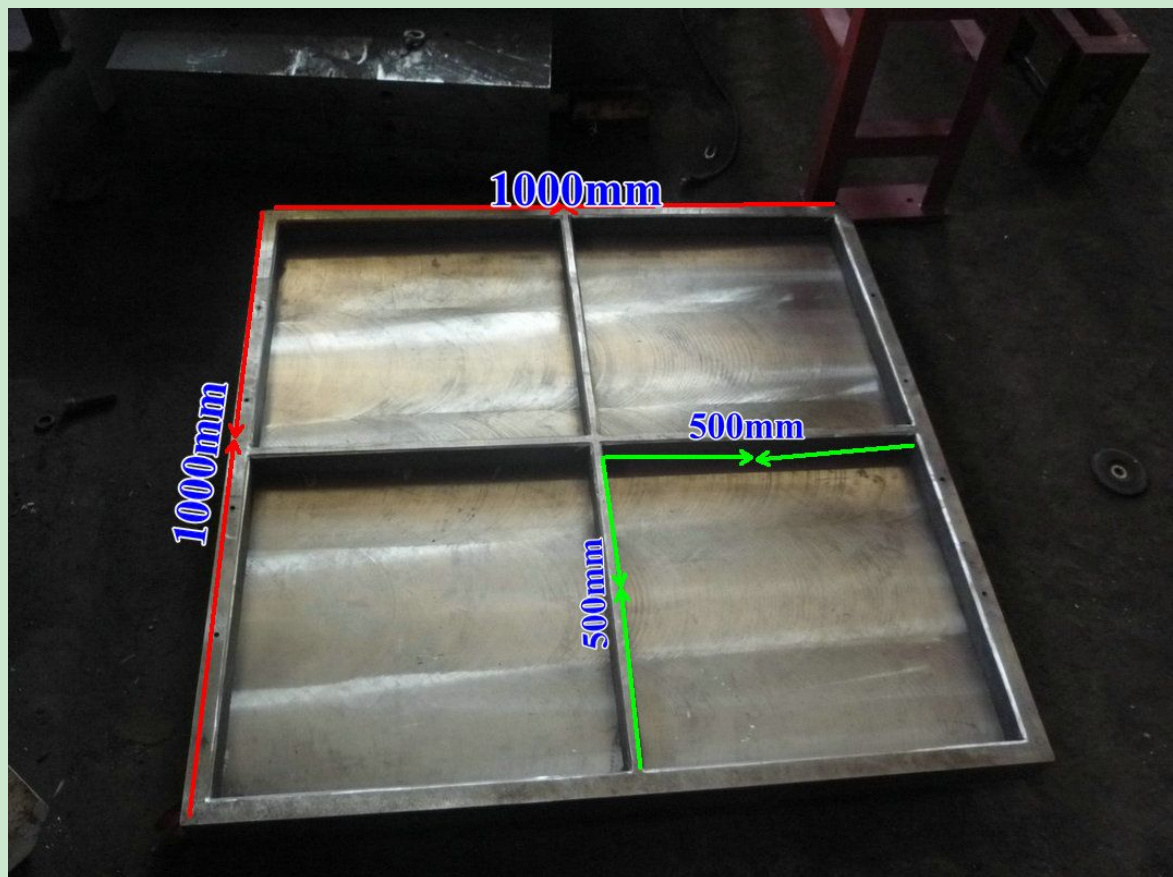



QINGDAO XIANGJIE RUBBER MACHINERY CO., LTD

ADD: No. 168, Shanghai Road, Jiaonan, Qingdao, China

PH: +86-15192075706

Fax: +86-532-86191899

E-mail: xiangjie.qd@gmail.com

Web: www.qdxiangjie.com

1000mm*1000mm

